







# Setting the programs 7:0 4 events Monday-Sunday

Monday—Sunday Default Scheduling			
Event	Time	With Floor Sensor	With Air sensor
 DAY (on)	8.00am	25°C	22°C
 OUT (off)	10.00am	20°C	15°C
 HOME (on)	4.00pm	25°C	22°C
 NIGHT (off)	11.00pm	20°C	15°C



Press the middle enter button to access the menu.

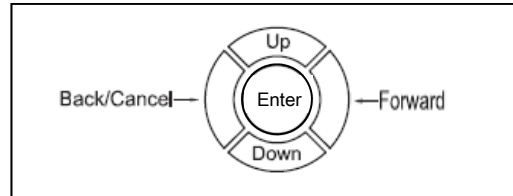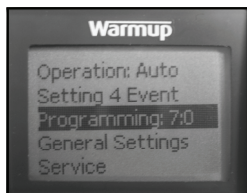


To Select the type of programming schedule you wish to use.  
 Scroll down to programming and press the middle enter button.



Scroll through the menu using the up & down keys and Select the type of programming schedule .

Press the enter button.

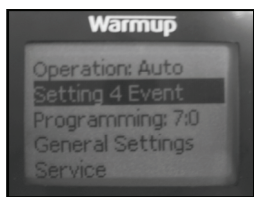

Scroll up in the menu using the up key and select Setting 4 events.


Press enter .



All the days of the week will be displayed . Scroll down to the day you wish to change using the up & down keys and press enter.



**Note: Each day must be set individually**

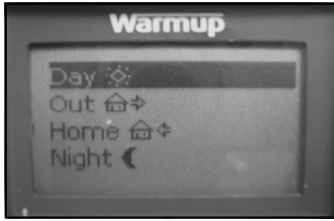

**STEP 1**  
Select the event & press the enter button.

**STEP 2.**  
Select the time & press the enter button. Using the up & down buttons select the time you wish the heaters to switch on in the morning. Press Enter.

**STEP 3.**  
Scroll down and select day temp & press enter. Using the up & down buttons select the desired temperature . Press Enter.

**STEP 4.**  
Now press the left key once to go back to the programming menu.

Select the next event you wish to change using the up and down buttons and press enter. Now follow the steps 1 - 4

Out- When you leave the house in the morning.



Home-When you reach back home.



Night—When you go to bed.



Each day must be set individually the Xstat controller will not set all the days of the week to the same schedule automatically.

Once you have completed the programming press the left key three times to go back to the main screen.